

## Origin Filter Drawer Replacement Instructions

### Parts Included:



New filter drawer  
2" to 1.25" adapter (attached to filter drawer)  
New magnets

### Parts you will need:

Epoxy glue  
Pen to mark magnet orientation

### Procedures:

1. Point the OTA straight up attached to a mount.
2. Remove the dew shield and lens cap.
3. Remove the existing filter drawer.
4. Clean the new magnets from the replacement kit.
5. Attach the new magnets onto the magnets in the filter drawer housing to confirm polarity. Mark the outer flat surfaces of the new magnets while attached to the filter housing's magnets.

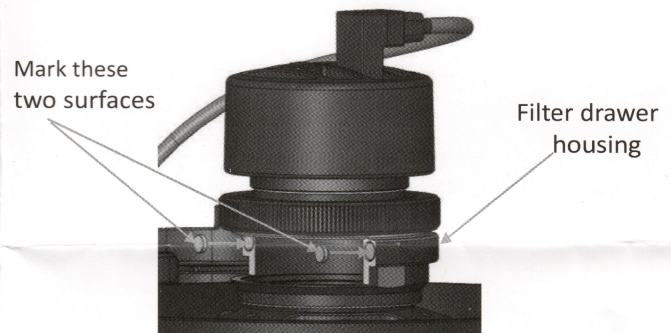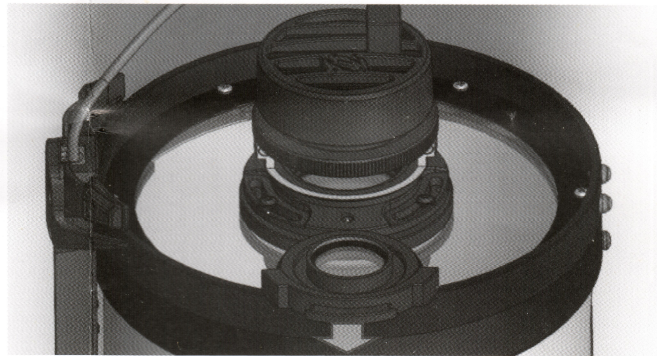

6. Insert the new filter drawer into the filter housing and pay attention to its orientation. Then pull the drawer back out.
7. Separate one new magnet from the filter drawer housing.
8. Apply a small amount of epoxy glue onto the marked surface of the new magnet.
9. Press the magnet into the corresponding hole in the new filter drawer until flush, making sure the marked side goes into the hole first so that the unmarked side faces outward.
10. Wipe off any excess glue with a wet rag.
11. Repeat Steps 6 through 10 for the other magnet.
12. Wait 24 hours until the epoxy cures before inserting the new filter drawer into the filter drawer housing.
13. When threading the 1.25" filter adapter and filter in, do not overtighten, and make sure the orientation is maintained.

